Print on Plain White Paper (Part No. 122919)

MIDMARK

INSTRUCTIONS

002-0705-00 12:00 FSC Base Floor Bracket and Cord Kit

Kit Components

Part Number	Description	Qty
002-0705-00	Base Floor Bracket & Cord Kit	
• 050-5346-50	Foot Bracket	2
• 040-0375-45	Screw (3/8"-16 x 1")	4
• 015-1597-00	Power Cord (6ft. [1.8 m])	1
• 102980	Connector	1
• 003-1286-00	Installations Instructions	1

Installation (Foot Brackets)

A. Remove leveling feet.

B. Install foot brackets, securing with four 3/8"-16 x 1" screws.

Installation (Power Cord)

C. Remove knock-out on lower receptacle box and install connector.

EQUIPMENT ALERT
Assure electrical leads from power cord are connected correctly to leads provided at lower receptacle box.

D. Insert power cord thru connector, connect power cord leads to leads provided at lower receptacle box, then tighten connector onto cord:

EQUIPMENT ALERT
Assure power cord is not pinched when routing to outside of base cabinet. This is for temporary installation only.

Foot Bracket

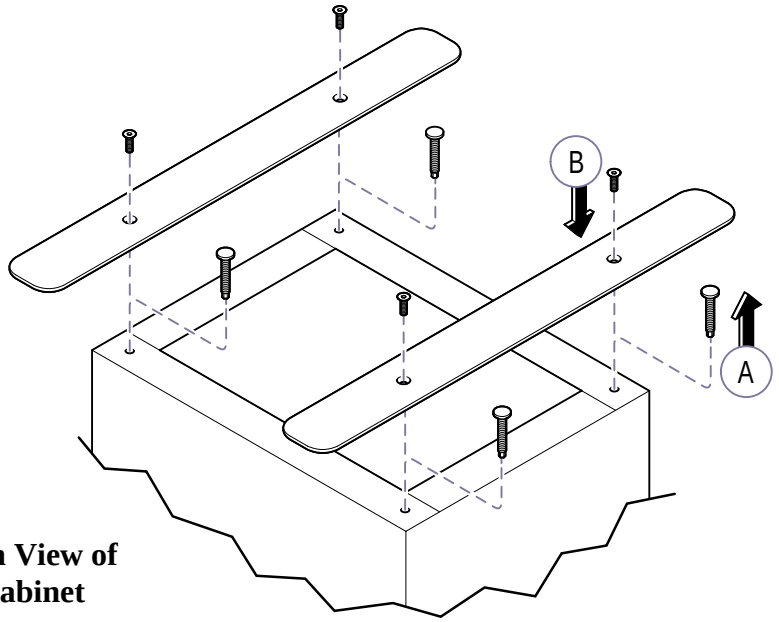

Bottom View of Base Cabinet

DA109900i

Power Cord (*For Temporary Installation Only*)

Black (Power Cord) to Brown - L (Box)
White (Power Cord) to Blue - N (Box)
Green (Power Cord) to Grn / Yl - G (Box)

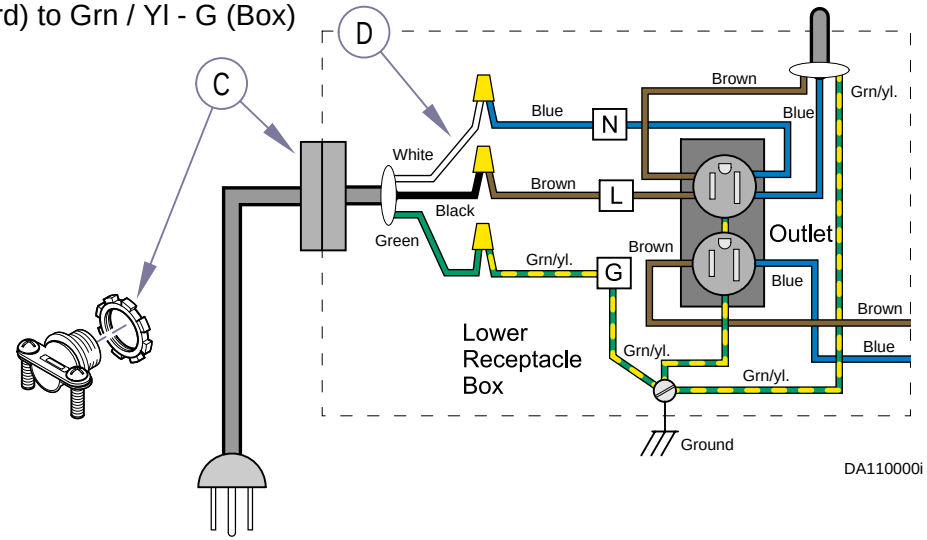

DA110000i